FEDERAL SIGNAL
Safety and Security Systems

Mounting the DRBKT-TB-SIL23 Bracket to the 2023+ Chevrolet® Silverado®

25501082 Rev A0 0726

Safety Messages for Installers of Warning Light Equipment

⚠ WARNING

People's lives depend on your safe installation of our products. It is important to read, understand and follow all instructions shipped with the products. Listed below are some other important safety instructions and precautions you should follow:

- To properly install the lighting system, you must have a good understanding of automotive systems, along with proficiency in the installation and use of safety warning equipment.
- Do not install equipment or route wiring in the deployment path of an airbag.
- If a vehicle seat is temporarily removed, verify with the vehicle manufacturer if the seat needs to be recalibrated for proper airbag deployment.
- Frequently inspect the light system to ensure that it is operating properly and is securely attached to the vehicle.
- When drilling into a vehicle structure, ensure that both sides of the surface are clear of anything that could be damaged.
- Refer to the instructions packed with related products for additional precautions and information.
- Do not stare directly into the lights at a close range, or permanent damage to your eyesight may occur.
- File these instructions in a safe place and refer to them when maintaining and/or reinstalling the product.

Failure to follow all safety precautions and instructions may result in property damage, serious injury, or death.

Introduction

This publication contains instructions for installing the DRBKT-TB-SIL23 mounting kit to mount a DynaFlare® to the truck bed of a 2023+ Chevrolet® Silverado®.

NOTE: For electrical installation instructions, refer to the installation and maintenance instructions packed with the light head.

Unpacking the Product

After unpacking the product, inspect it for damage that may have occurred in transit. If it has been damaged, do not attempt to install or operate it. File a claim immediately with the carrier, stating the extent of the damage. Failure to identify damage before installation could lead to the rejection of any claim. Carefully check all envelopes, shipping labels, and tags before removing or destroying them. Ensure that the parts listed are included in the package. If you are missing any parts, contact Federal Signal Customer Support at 1-800-264-3578, 7 a.m. to 5 p.m., Monday through Friday (CT).

Table 1 Kit Contents

Qty	Description	Part Number
8	Stainless Steel Bolt, 5/16-18, Hex	7002A005-14
8	Stainless Steel Hex Nut, 5/16-18	7057A027
16	Stainless Steel Flat Washer, .344 X 3/4 X .050	7072A031
8	Stainless Steel Lock Washer, Split, 5/16	7074A020
8	DynaFlare Truck Bed Bracket	866005384

Installing the Brackets

⚠ WARNING


AIRBAG DEPLOYMENT: Do not install equipment or route wiring in the deployment path of an airbag. Failure to observe this warning will reduce the effectiveness of the airbag or potentially dislodge the equipment, causing serious injury or death.

To install the 5-foot DynaFlare® onto the truck bed of a 2023+ Chevrolet® Silverado®:

1. Use the 10-32 machine screws and 10-32 el stop nuts (provided with the DynaFlare) to loosely mount four truck bed brackets onto the 5-foot DynaFlare. See Figure 1.

   NOTE: When mounting a 1-foot or 2-foot DynaFlare, use two brackets per DynaFlare. When mounting a 3-foot DynaFlare, use three brackets per DynaFlare. When mounting a 5-foot or 6-foot DynaFlare, use four brackets per DynaFlare.


Figure 1 Mounting Truck Bed Bracket to a 5-Foot DynaFlare

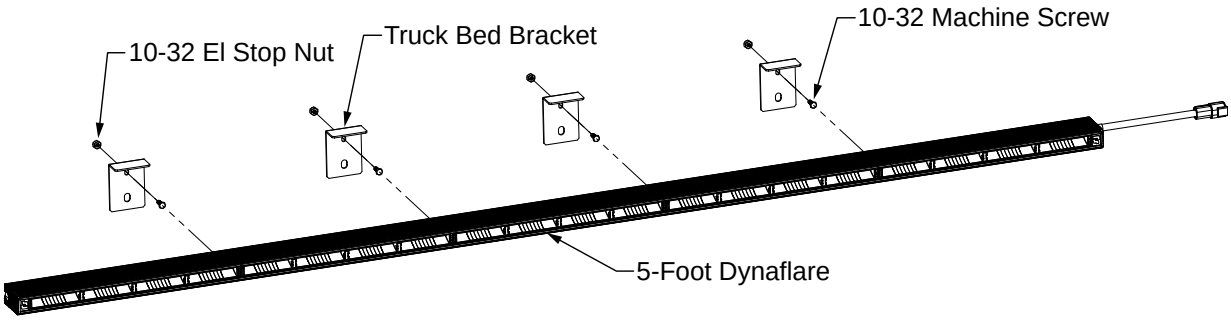

2. Mark the indicated holes onto the trim. See Figure 2

   NOTE: Run your hand behind the plastic trim to find exact locations.

Figure 2 DynaFlare on a 2023+ Chevrolet® Silverado® (Passenger Side Shown)

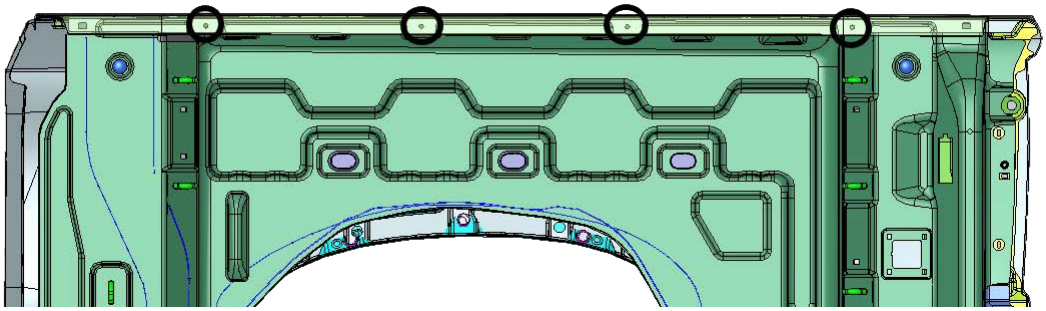

NOTICE


DRILLING PRECAUTIONS: When drilling holes, check the area you are drilling into to ensure that you do not damage vehicle components while drilling. All drilled holes should be deburred, and all sharp edges should be smoothed. All wire routings going through drilled holes should be protected by a grommet or convolute/split loom tubing.

3. Use a 3/8-inch drill bit and drill the marked hole locations. Clean and prep the holes after drilling.

4. Use the 5/16-18 hex bolts, 5/16-18 hex nuts, 5/16 lock washers, and flat washers to secure the DynaFlare onto the truck bed. Tighten the 10-32 screws to secure the DynaFlare® onto the brackets.

5. Repeat Steps 1-4 for the driver's side.

Figure 3 Mounting DynaFlare® onto a 2023+ Chevrolet® Silverado® (Passenger Side Shown)

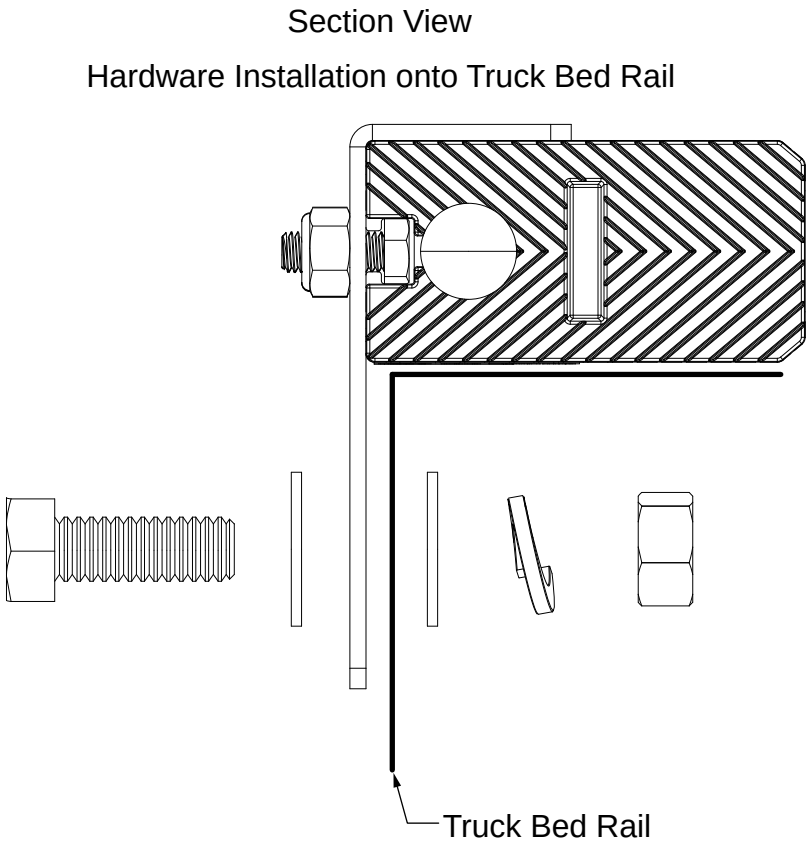

6. Complete the wiring according to the instructions supplied with the DynaFlare®.

Getting Technical Support

For technical support, please contact:

Federal Signal Corporation
Service Department
Phone: 1-800-433-9132
Email: empserviceinfo@fedsig.comGetting Repair Service

Getting Repair Service

The Federal Signal factory provides technical assistance with any problems that cannot be handled locally. Any product returned to Federal Signal for service, inspection, or repair must be accompanied by a Return Material Authorization (RMA). Obtain an RMA from a local Distributor or Manufacturer's Representative. Provide a brief explanation of the service requested or the nature of the malfunction.

Address all communications and shipments to the following:

Federal Signal Corporation
Service Department
2645 Federal Signal Dr.
University Park, IL 60484-3167

Limited Warranty

This product is subject to and covered by a limited warranty, a copy of which can be found at www.fedsig.com/SSG-Warranty. A copy of this limited warranty can also be obtained by written request to Federal Signal Corporation, 2645 Federal Signal Drive, University Park, IL 60484, email to info@fedsig.com or call
+1 708-534-3400.

This limited warranty is in lieu of all other warranties, express or implied, contractual or statutory, including, but not limited to the warranty of merchantability, warranty of fitness for a particular purpose and any warranty against failure of its essential purpose.

FEDERAL SIGNAL®
Safety and Security Systems
2645 Federal Signal Drive
University Park, Illinois 60484-3167

www.fedsig.com

Customer Support
Police/Fire-EMS: 800-264-3578 • +1 708 534-3400
Work Truck: 800-824-0254 • +1 708 534-3400
Technical Support: 800-433-9132 • +1 708 534-3400

© Copyright 2026 Federal Signal Corporation. All rights reserved worldwide.
All product names or trademarks are properties of their respective owners.